


AIRIUS MOUNTING GUIDELINES - SAPPHIRE SERIES - Model G400/EC

PLUG NOT SUPPLIED

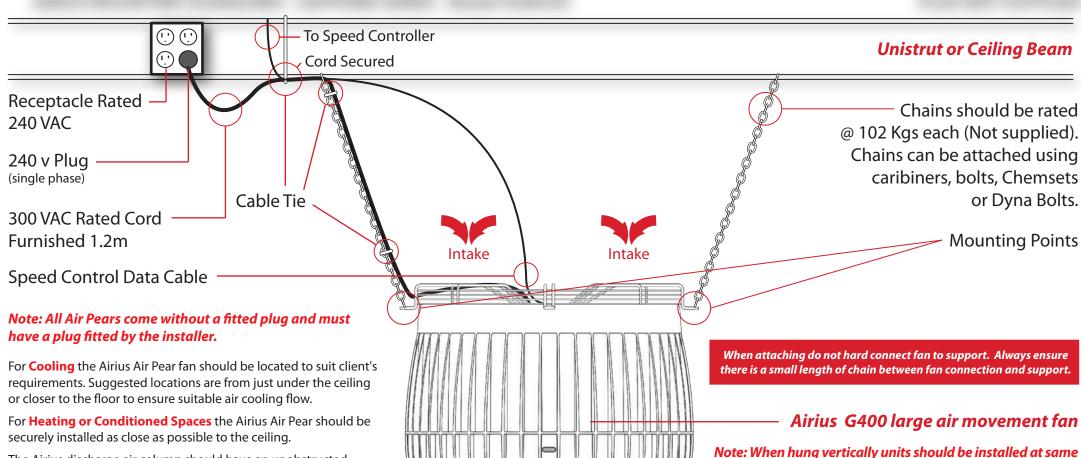

Exhaust

P.O. Box 1812, Byron Bay, NSW 2481

to return air ducts in conditioned spaces.

The Airius discharge air column should have an unobstructed

passage to the floor. The Airius unit should not be mounted directly in front of heat ducts, vents or any other high heat source.

The units must not be located closer than 3 metres

E: info@airius.com.au W: www.airius.com.au

Office: +61 (0) 401 84 8888

NOTE: 0-10 volt analogue signal supplied by fan motor. 3 wire low voltage cable or Cat 5 or Cat 6 cable to be used to either an Airius Potentiometer or a BMS controller (by others).


height <u>OR</u> units must be run on seperate speed control circuits.

AIRIUS®, AIR PEAR®, and THE THERMAL EQUALIZER® are trademarks of Airius, LLC, registered in the U.S. and in some countries abroad. Other trademarks pending in the U.S. and abroad.



AIRIUS MOUNTING GUIDELINES - SAPPHIRE SERIES - Model G400/EC (Angled)

PLUG NOT SUPPLIED

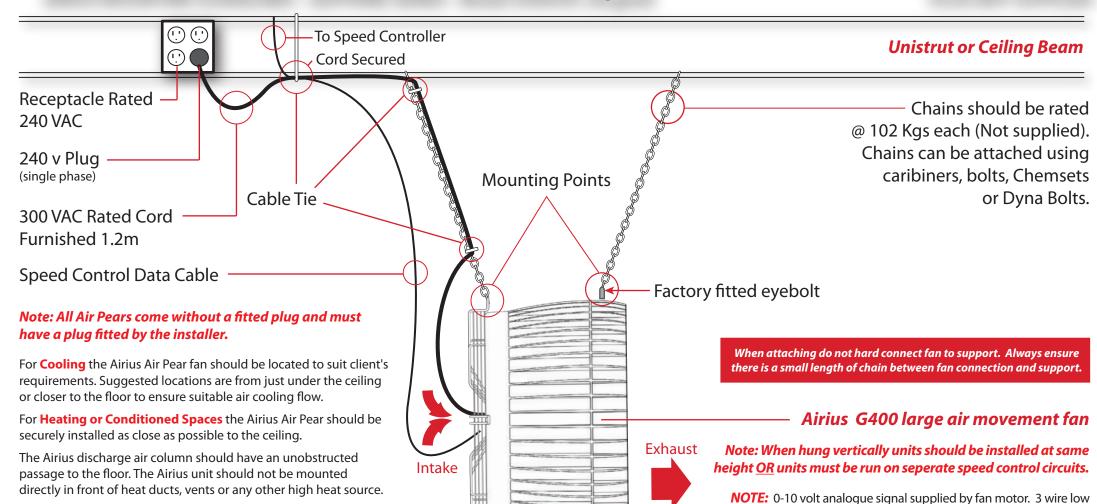

P.O. Box 1812, Byron Bay, NSW 2481

to return air ducts in conditioned spaces.

The units must not be located closer than 3 metres

E: info@airius.com.au W: www.airius.com.au

Office: +61 (0) 401 84 8888

AIRIUS®, AIR PEAR®, and THE THERMAL EQUALIZER® are trademarks of Airius, LLC, registered in the U.S. and in some countries abroad. Other trademarks pending in the U.S. and abroad.

voltage cable or Cat 5 or Cat 6 cable to be used to either an Airius

Potentiometer or a BMS controller (by others).