


**AIRIUS MOUNTING GUIDELINES - PEARL SERIES - Model PS S1 & S2**

**PLUG NOT SUPPLIED**

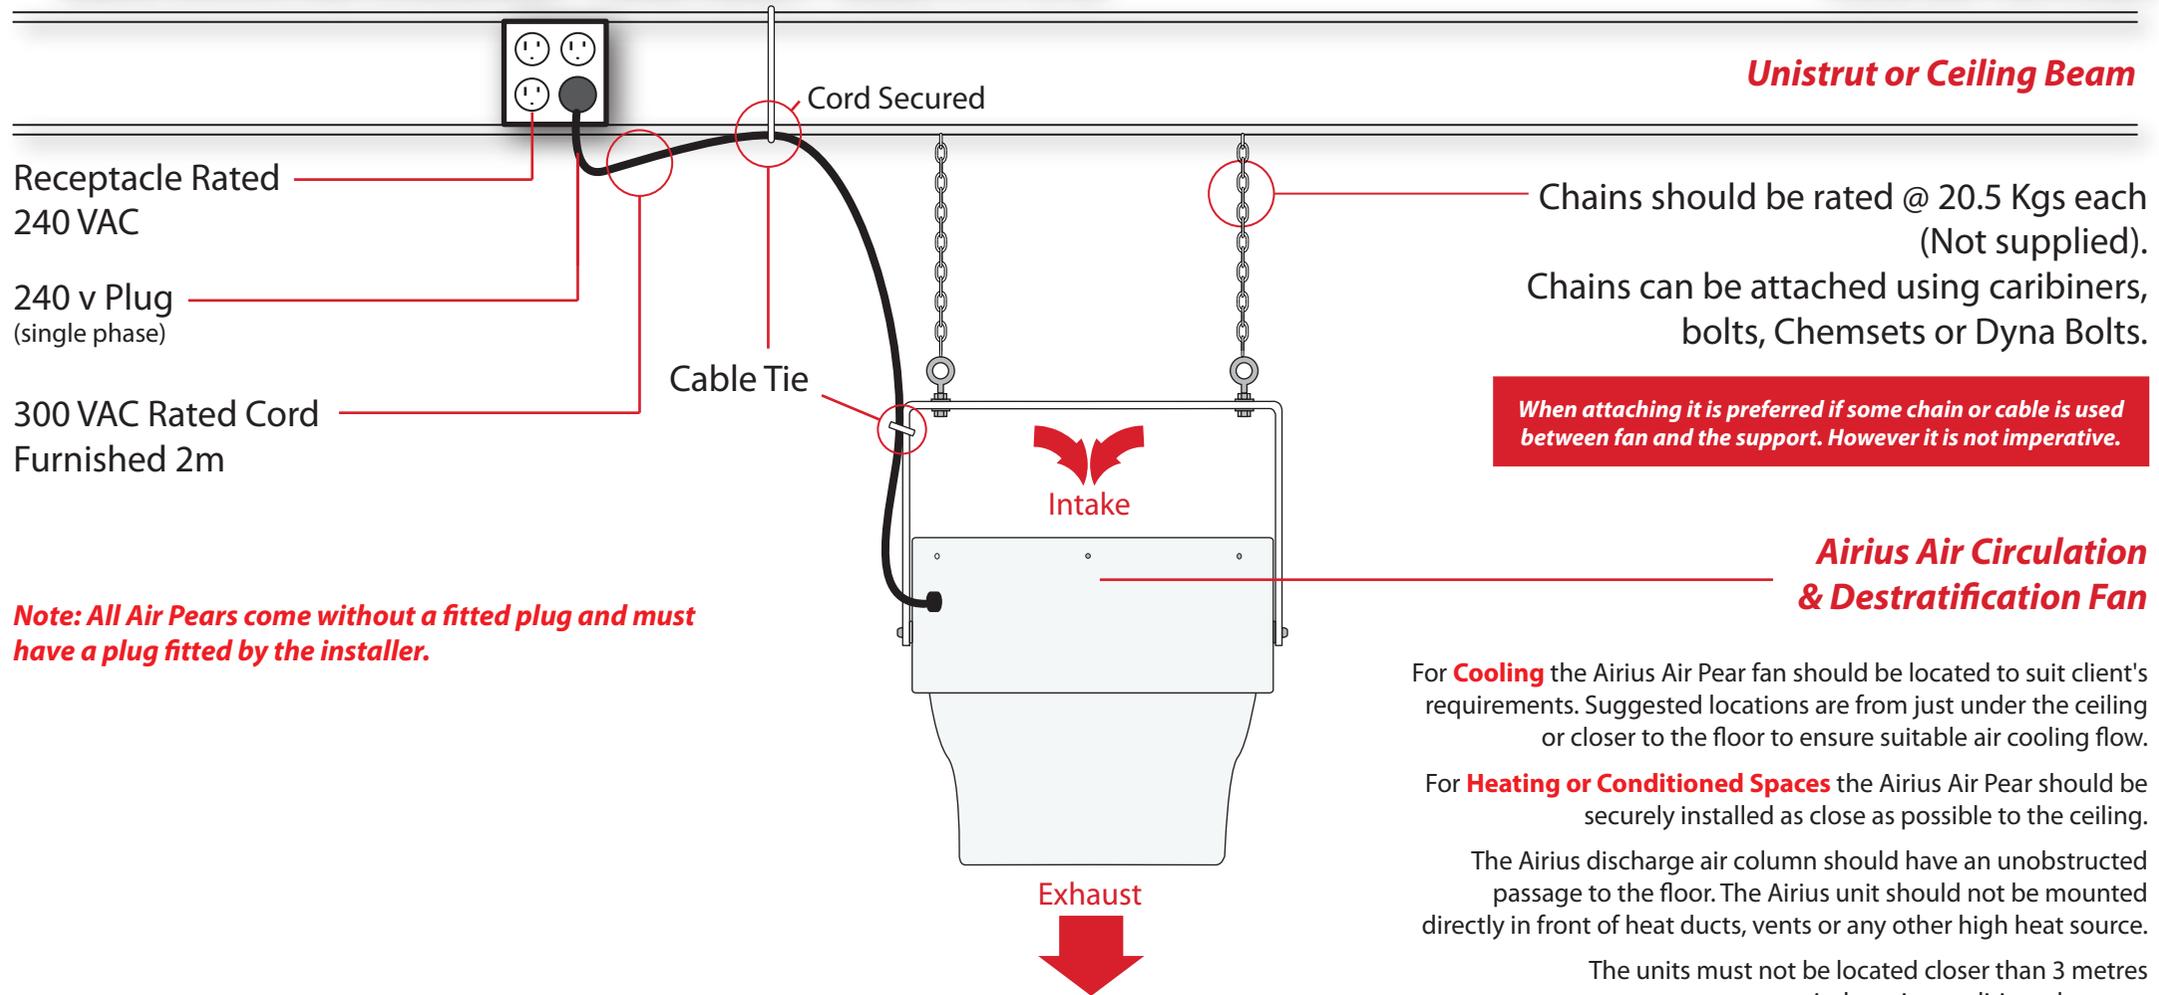

**Note: All Air Pears come without a fitted plug and must have a plug fitted by the installer.**

**When attaching it is preferred if some chain or cable is used between fan and the support. However it is not imperative.**

**Airius Air Circulation & Destratification Fan**

For **Cooling** the Airius Air Pear fan should be located to suit client's requirements. Suggested locations are from just under the ceiling or closer to the floor to ensure suitable air cooling flow.


For **Heating or Conditioned Spaces** the Airius Air Pear should be securely installed as close as possible to the ceiling.

The Airius discharge air column should have an unobstructed passage to the floor. The Airius unit should not be mounted directly in front of heat ducts, vents or any other high heat source.

The units must not be located closer than 3 metres to return air ducts in conditioned spaces.

## AIRIUS MOUNTING GUIDELINES - PEARL SERIES - Model PS S1 & S2 (Angled)

**PLUG NOT SUPPLIED**

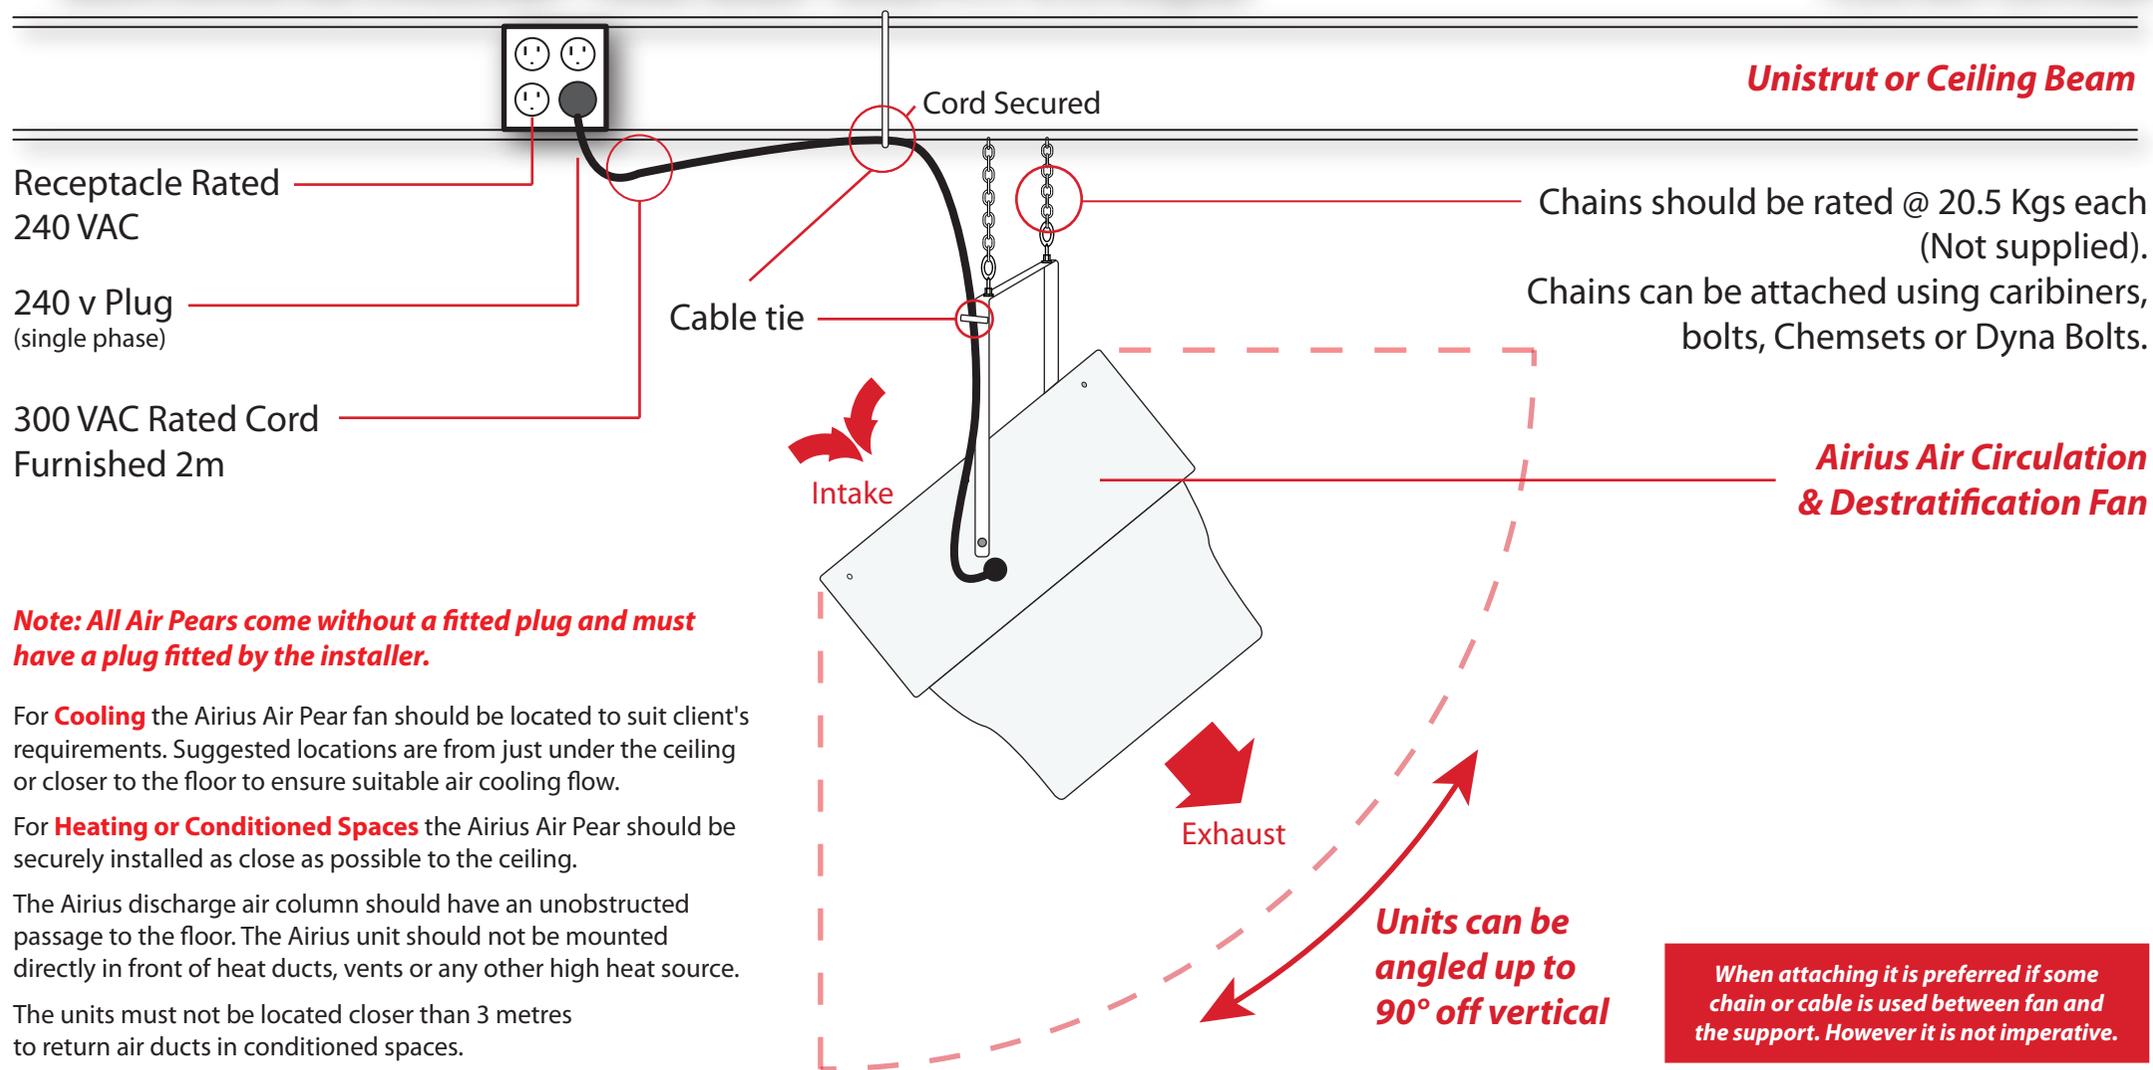

**Note: All Air Pears come without a fitted plug and must have a plug fitted by the installer.**

For **Cooling** the Airius Air Pear fan should be located to suit client's requirements. Suggested locations are from just under the ceiling or closer to the floor to ensure suitable air cooling flow.


For **Heating or Conditioned Spaces** the Airius Air Pear should be securely installed as close as possible to the ceiling.

The Airius discharge air column should have an unobstructed passage to the floor. The Airius unit should not be mounted directly in front of heat ducts, vents or any other high heat source.

The units must not be located closer than 3 metres to return air ducts in conditioned spaces.

## AIRIUS MOUNTING GUIDELINES - PEARL SERIES - Model PS S1 & S2 (Wall Mounted)

**PLUG NOT SUPPLIED**

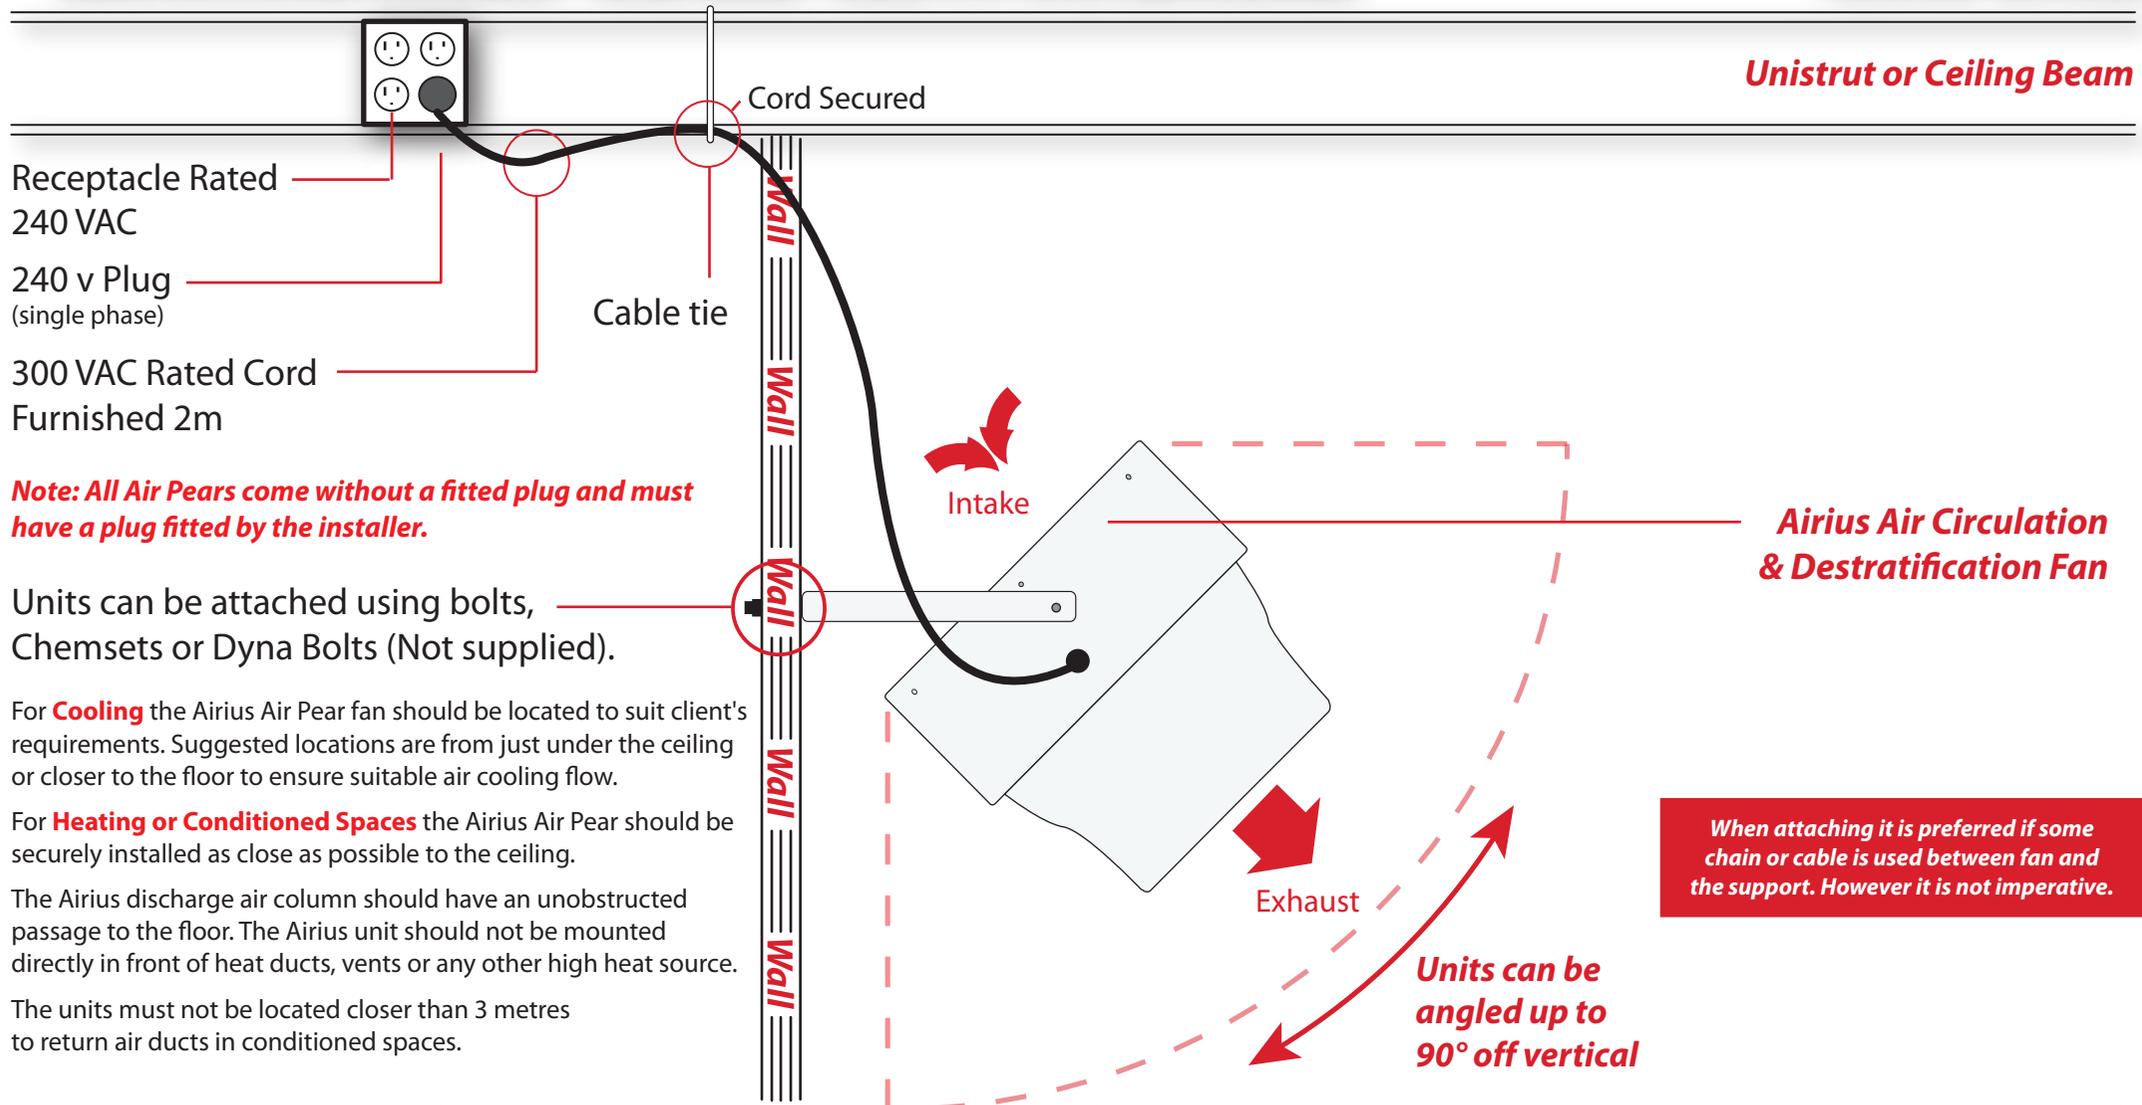

Receptacle Rated  
240 VAC

240 v Plug  
(single phase)

300 VAC Rated Cord  
Furnished 2m

**Note: All Air Pears come without a fitted plug and must have a plug fitted by the installer.**

Units can be attached using bolts, Chemsets or Dyna Bolts (Not supplied).

For **Cooling** the Airius Air Pear fan should be located to suit client's requirements. Suggested locations are from just under the ceiling or closer to the floor to ensure suitable air cooling flow.

For **Heating or Conditioned Spaces** the Airius Air Pear should be securely installed as close as possible to the ceiling.

The Airius discharge air column should have an unobstructed passage to the floor. The Airius unit should not be mounted directly in front of heat ducts, vents or any other high heat source.

The units must not be located closer than 3 metres to return air ducts in conditioned spaces.

**Unistrut or Ceiling Beam**

**Airius Air Circulation & De-stratification Fan**

**When attaching it is preferred if some chain or cable is used between fan and the support. However it is not imperative.**

**Units can be angled up to 90° off vertical**