

AIRIUS

AUS.

P.O. Box 1812, Byron Bay, NSW 2481 www.airius.com.au info@airius.com.au


U.S.A.

www.airiusfans.com info@airiusfans.com


U.K.

www.airius.co.uk info@airius.co.uk

Pearlink Hardware Configuration

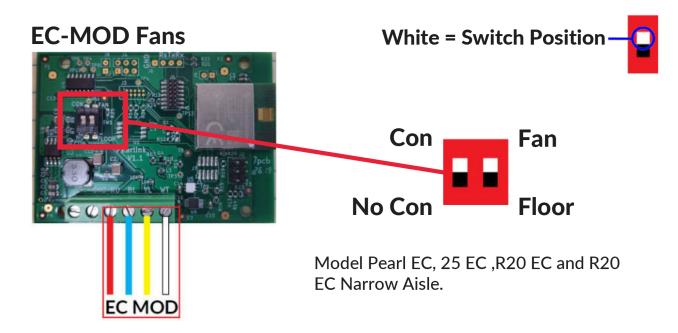

All Other EC Fans

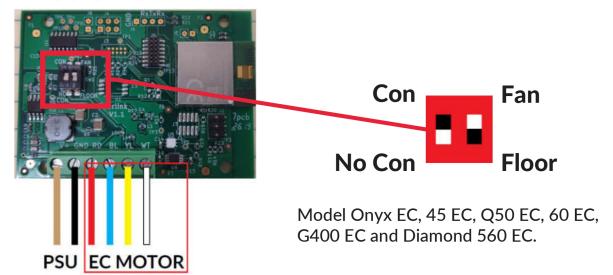

Floor Sensors



Note:- this is where the power transformer fits as the floor sensor needs a power source.

PSU

Note these larger fans need to have the extra **12 volt DC** power transformer fitted to each Wi-Fi module as detailed (PSU).

PearLink Reset Instructions

- 1) Unplug fan to shut off power.
- 2) Remove the PearLink enclosure by sliding it upward. It will still be connected to the fan wiring.
- 3) Remove the two screws on the back of the enclosure to expose the circuit board.
- 4) Use a paper clip, or other conductive material to bridge the two pads circled below.



- 5) While the bridge is still intact, power the fan.
- 6) Wait 10 seconds.
- 7) Unplug the fan and remove the bridge.
- 8) The device is now ready to be re-provisioned through the app.